


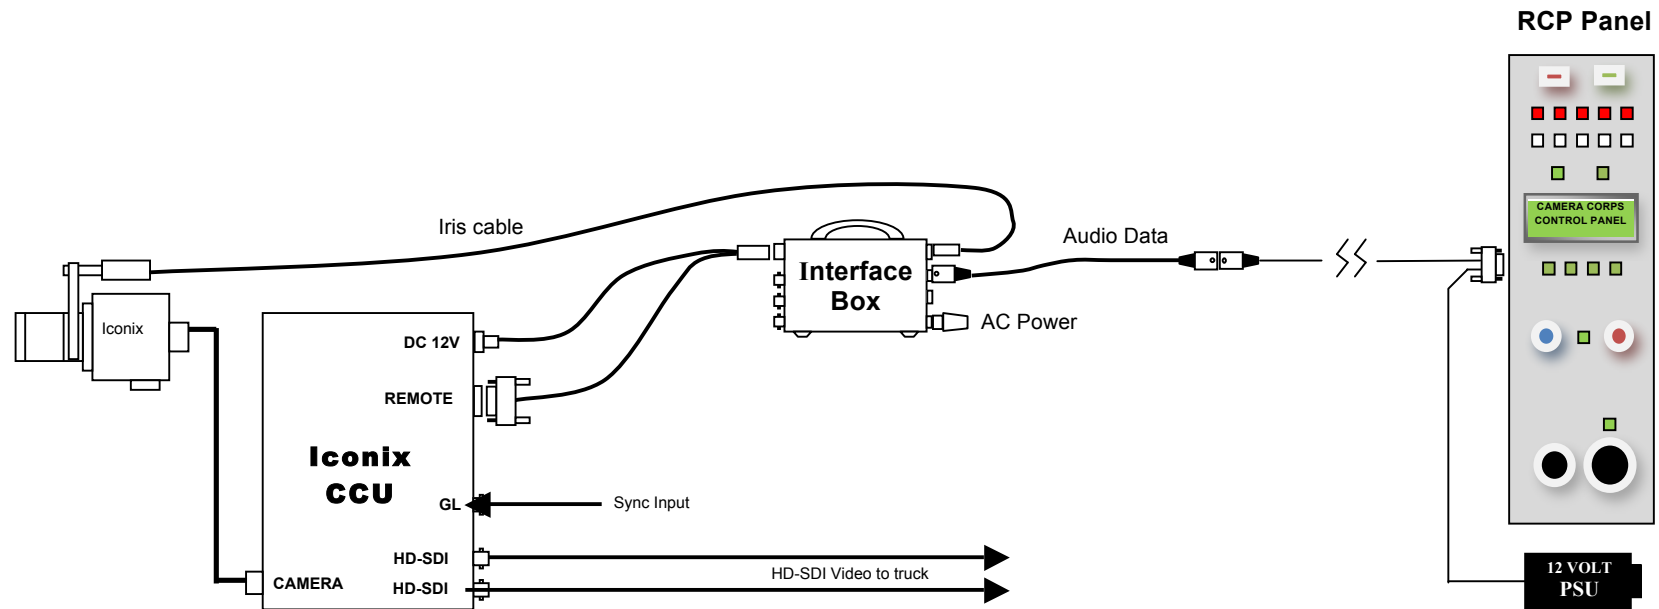

Iconix HD-RH1

Configuration shown with RCP panel, Interface box & DC iris motor



Notes

1. Data from the RCP panel is fed directly to the interface box or via the PTZF controller if other pan & tilt cameras are being controlled
2. The lens iris is controlled using the remote functions output on the interface box